

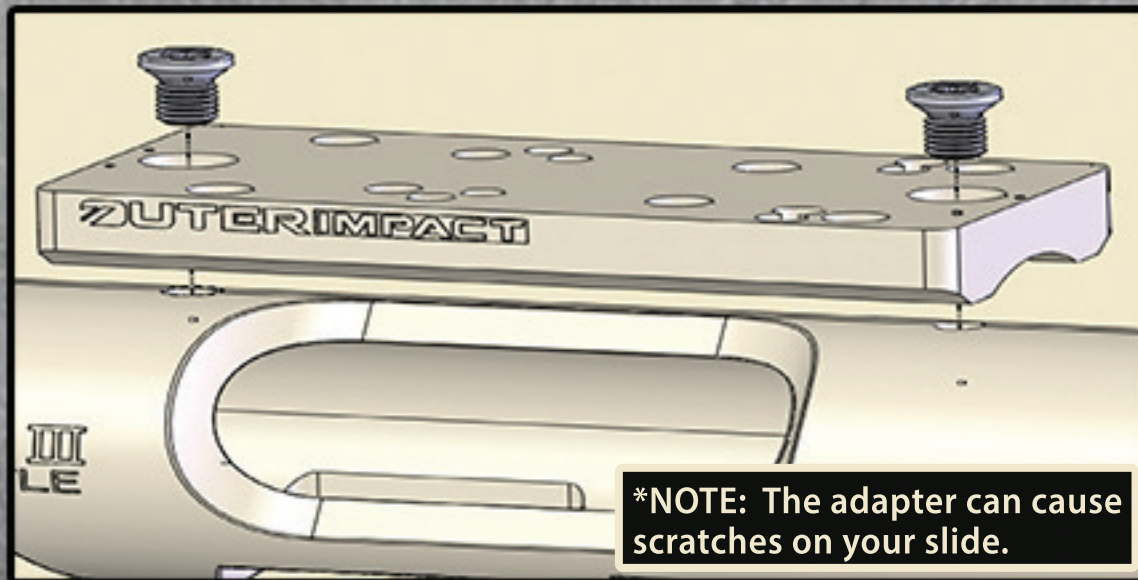
# OUTER IMPACT

## RUGER MARK I, II, III, IV, 22/45-M.R.A. (Modular RedDot Adapter) Mounting Instructions

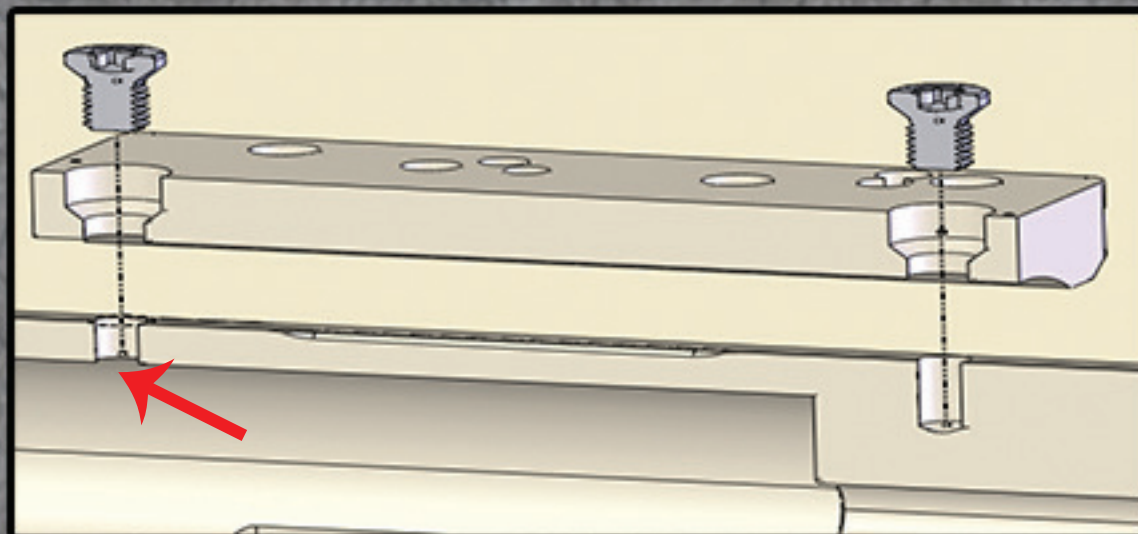
Utilize a certified Gun Smith to install adapter. It is possible to install adapter if a Gun Smith is not accessible, but it is recommended that adapter be installed by a Gun Smith.

**WARNING:** *Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.*


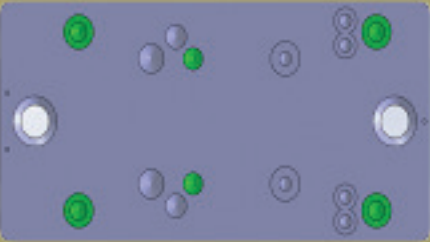



**Step 1:** Locate bag marked "MNT HDWR" and remove the two torx screws.



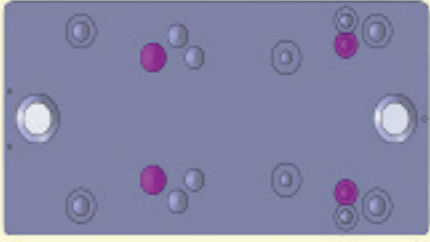
**Step 2:** Align M.R.A. as illustrated above. Fasten M.R.A. with torx screws. Torque to 25 in/lbs.

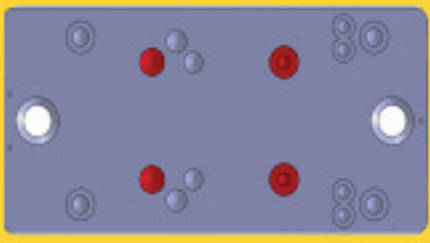


**STEP 3:** Inspect the inside of the receiver, to confirm the end of the torx screw does not interfere with the bolt.

MOUNTING PATTERNS:	SIGHT Manufacture	SIGHTS Model	SCREWS USED
All Mounting Patterns Utilize the 2 Alignment Pins 			
	VORTEX	VIPER	SIGHT SUPPLIED SCREWS WORK
	BURRIS	FAST FIRE II/III	M3 x 8mm 
	DOCTOR INSIGHT EOTECH	MRDS MRDS	SIGHT SUPPLIED SCREWS WORK OR UTILIZE PROVIDED M3 X 6mm 
	VORTEX	VENOM	M3 X 6mm 

			
	TRIJICON	RMR	SIGHT SUPPLIED SCREWS WORK

			
	LEUPOLD	Delta Point Delta Point Pro	SIGHT SUPPLIED SCREWS WORK

	VORTEX	RAZOR	SIGHT SUPPLIED SCREWS WORK
	CMORE	RTS & STS	SIGHT SUPPLIED SCREWS WORK

UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.