

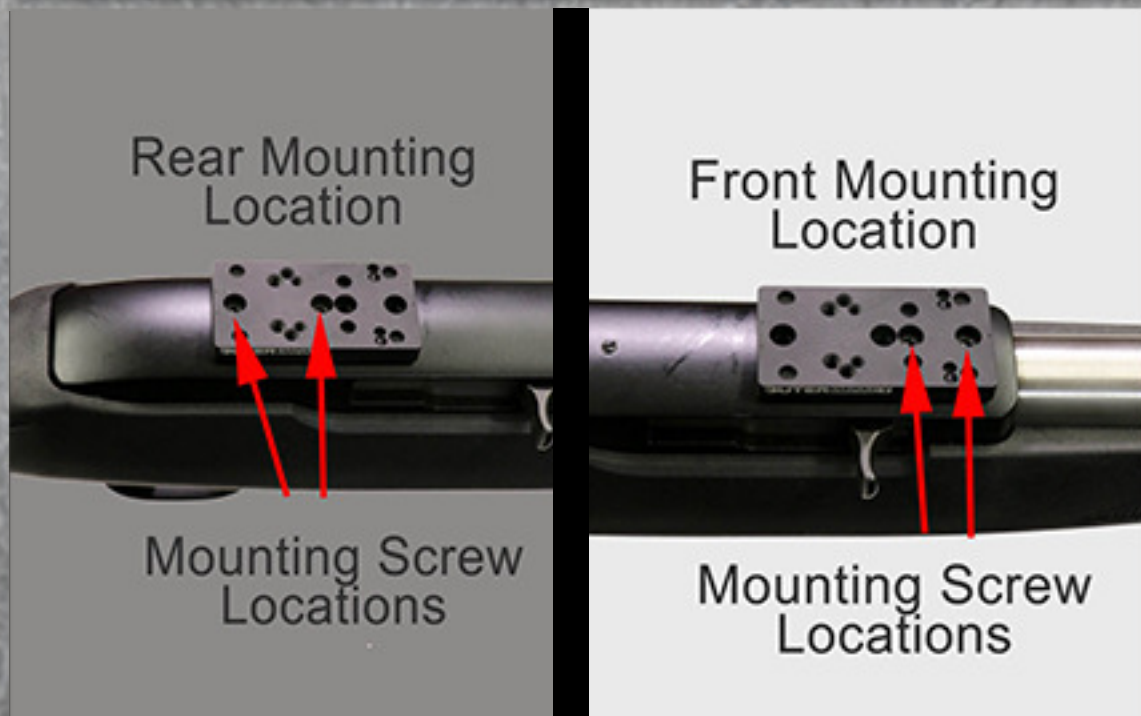
# OUTER IMPACT

## RUGER 10/22 - M.R.A. (Modular RedDot Adapter) Mounting Instructions

Utilize a certified Gun Smith to install adapter. It is possible to install adapter if a Gun Smith is not accessible, but it is recommended that adapter be installed by a Gun Smith.

**WARNING:** *Never remove or install components on a gun before ensuring the gun is not loaded and the chamber is clear.*

**Step 1:** Locate bag marked "MNT HDWR" and remove the (2) 6-48 Torx headed screws.




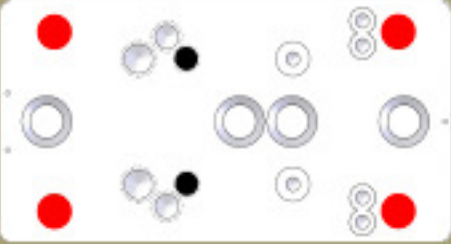




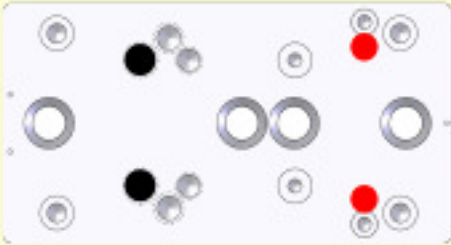
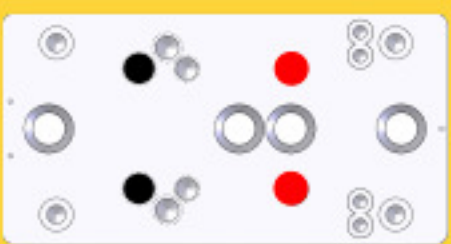

**Step 2:** Choose one of the 2 mounting locations. Either forward or reward mounting holes.

**STEP 3:** Remove the factory screws from receiver in the desired mounting location.

**STEP 4:** Align MRA plate over the chosen mounting holes.

**STEP 5:** Fasten MRA plate to receiver utilizing the (2) 6-48 Torx headed screws (provided).

**STEP 6:** Torque screws to 25 in/lbs

MOUNTING PATTERNS:	SIGHT Manufacture	SIGHTS Model	SCREWS USED
The <b>RED</b> circles indicate locations for 2 included alignment pins  The <b>BLACK</b> circles indicate locations for mounting screws ---- Torque Screws to 12 IN/LBS			
	VORTEX	VIPER	SIGHT SUPPLIED SCREWS WORK
	BURRIS	FAST FIRE II/III	M3 x 8mm 
	DOCTOR INSIGHT EOTECH	MRDS MRDS	SIGHT SUPPLIED SCREWS WORK OR UTILIZE PROVIDED M3 x 6mm 
	VORTEX	VENOM	M3 X 6mm 
	TRIJICON RMR SIGHT SUPPLIED SCREWS WORK		
	LEUPOLD Delta Point Delta Point Pro SIGHT SUPPLIED SCREWS WORK		
	VORTEX SIG SAUER CMORE	RAZOR ROMEO3 RTS & STS	M4 SCREWS 
UTILIZE LIQUID THREAD LOCKER UPON FINAL INSTALLATION OF ALL THREADED FASTENERS.			